

# **Pouch Mounting Board Instruction Sheet**

**Use with inkjet media to create rigid signs and displays. Matte, bond and coated papers work best with pouch mounting boards, not all media will be compatible with the adhesive.**

- 1. Carefully remove the pouch mounting board from the box.**
- 2. Position your print on the board.**
- 3. Lay the cover sheet (included) over the board. Place the shiny side toward the print.**
  - The cover sheet is silicone coated paper to which adhesive will not stick. It will keep any exposed adhesive on your board from sticking to the rollers.**
- 4. Insure the laminator is ready and up to temperature**
  - Set the nip opening thickness to 3/16" thick**
  - With variable temperature – set to 250°F**
  - With variable speed – set to 2 feet/minute**
  - With variable pressure – set to 60 psi**
- 5. Slowly insert the mounting board into the laminator.**
- 6. Allow the pouch board to lie flat while cooling.**
- 7. If there is any dirt on the board, it can be cleaned easily with and a damp cloth.**
- 8. Trim your print as desired. There is an adhesive coated edge on the board allowing you to trim flush to the print.**